

ROXEL
DAB RADIO NOD2
WIRELESS CHARGING SPEAKER

USER MANUAL

Important safety instructions

Thank you for purchasing our product. ROXEL products are conceived and designed striving to achieve contemporary, well thought out updates on modern classics. We found that simple, timeless ideas go a long way when you combine them with high quality materials and determination to remain affordable. Please read the instructions thoroughly and retain this manual for future reference.



The lightning flash with arrowhead inside the triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock.



To prevent the risk of electric shock, do not remove the cover (or back). No user- serviceable Parts inside. Refer servicing to qualified Service personnel only.



The exclamation mark inside the triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the product.

1. Read these instructions.
2. Retain this manual.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this device in wet conditions.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance to the manufacturer's instructions.
8. Do not use near any heat sources such as radiators, heaters, stoves, or other devices (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician about the replacement.

Important safety instructions

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point connecting to the device.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this device during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel.
14. The MAINS plug is used to disconnect the device. The disconnected device will remain in standby.

Note: There is a built-in rechargeable lithium-ion battery in the device. Danger of explosion if the device is disassembled. The device should not be placed close to excessive heat source. The battery should not be exposed to excessive heat such as sunshine, fire or the like. Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type of the battery.



Correct disposal of this product. This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment, please follow the government guidelines and recycle responsibly.

Unpack the box

 
Charge Instructions:

Use supplied AC adaptor (5V/3A) to connect the device Roxel Nod with electrical socket to supply power.


Packing List



DAB Radio

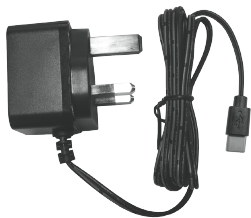

3 Pin Adaptor

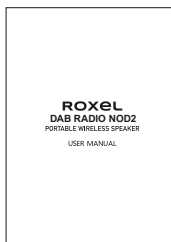 

User Manual

Specifications

 
- Audio output power: RMS 3W
- Signal to noise ratio: $\geq 70\text{dBA}$
- Distortion: $\leq 5\%$
- Frequency response: 100HZ-18KHZ
- Audio input interface: DAB, FM, Bluetooth
- Adjustment form: Button
- Input power: DC 5V/3A
- Wireless charging output: 5W
- DAB receiving input sensitivity: -97dBm
- FM receiving input sensitivity: -105dBm
- Working environment temperature: $-10^{\circ}\text{C} \sim 50^{\circ}\text{C}$
- Storage temperature: $-20^{\circ}\text{C} \sim 70^{\circ}\text{C}$
- Product size: 165*95*92 mm
- Product Net weight: about 520g

Function description

- This product is a comprehensive digital alarm clock radio device, integrating DAB, FM, Bluetooth, and Wireless charging.
- Supports Band III DAB/DAB+ digital signal reception
- Supports Band II 87.5-108 MHz FM reception with RDS function
- Supports 5.0 standard Bluetooth version
- With big LED display and small LCD display
- With real-time clock function and automatic time update through DAB
- Two sets of alarm clock function with optional DAB/FM/Buzzer alarm sound source
- Built-in Wireless Charging pad is compatible with all Qi-enabled phones.
- Supports multi-language (nine languages) system operation

Instruction

Product View

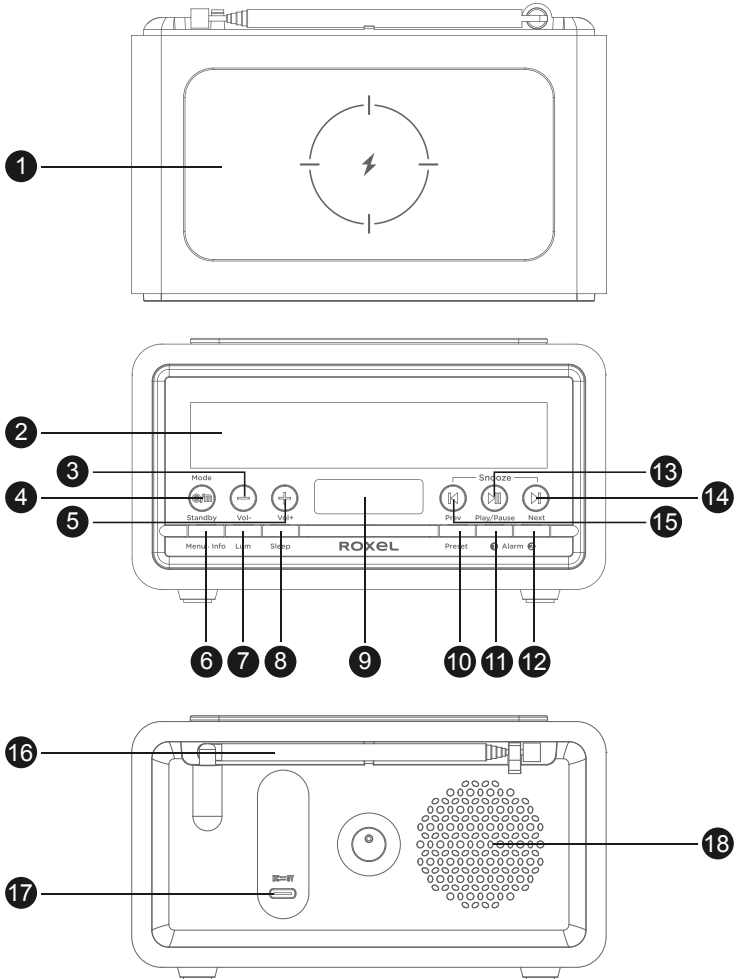

- 01 Wireless charging pad
- 02 LED display
- 03 VOL-
- 04 Mode / Standby button
 - Short press -- Switch between DAB/FM/Bluetooth modes.
 - Long press to enter standby mode, then short press to exit standby mode.
 - Long press to enter standby mode, then long press again to power off the device.
- 05 VOL+
- 06 Menu.Info button
 - Short press -- Show DAB information
 - Long press -- Enter menu set up
- 07 Lum button
 - Short press -- Adjust display brightness Level : 4-3-2-1-off
- 08 Sleep button
 - Long press -- Enter Sleep timer set up interface
- 09 Small LCD display
- 10 PRESET button
 - DAB/FM mode: Short press -- Recall preset radio station list.
 - Long press -- Add current radio station to preset radio list.
- 11 Alarm 1 button
 - Short press -- Turn on/off Alarm 1
 - Long press -- Enter Alarm 1 set up interface
- 12 Alarm 2 button
 - Short press -- Turn on/off Alarm 2
 - Long press -- Enter Alarm 2 set up interface
- 13 Play/Pause / Snooze button
 - DAB/FM mode: Long press -- Automatic searching radio stations.
 - Bluetooth mode: Short press -- Play/Pause
 - Menu set up: Short press -- Enter/Confirm
 - When alarm rings: Short press -- to activate snooze function

Instruction

- 14 Next / Snooze button
- 15 Previous / Snooze button
- 16 Antenna
- 17 Charging port
- 18 Speaker

Power ON/OFF

Use supplied AC adaptor (5V/3A) to connect the device Roxel Nod with electrical socket to supply power.

Wireless charging Pad (Power supply by AC adaptor)

Roxel Nod with wireless charging features a Qi charging pad on the top that allows you to charge Qi enabled phones wirelessly. Just put your phone on the top, it will give you a full charged phone when you wake up in the morning.

Clock Radio Power ON/OFF

After connecting the power, Roxel Nod is powered on.

Long press the Mode/Standby button to enter Standby mode, then short press the Mode/Standby button to exit Standby mode.

Long press the Mode/Standby button to enter Standby mode, then long press the Mode/Standby button again to power off.

DAB Radio

1. Upon being powered on, the device will go to DAB mode automatically and will start searching for available DAB stations, which will be stored after the search is completed. (If the device has already searched for radio stations, you can also press and hold the Play/Pause button to perform automatic searching.)
2. Press the Prev/ Next button to select your desired DAB station(see small screen), then press the Play/Pause button to play. Press the Vol-/Vol+ button to adjust volume.
3. Short press the Menu.Info button to view the current station information(see small screen): text information, signal strength, program type, episode name, channel number/frequency, signal error rate, bit rate, time and date, etc.
4. Saving stations into preset mode:
 - (1) Long press Play/Pause button (if a full scan was previously done please move to step 2)

Instruction

- (2) Find the radio station by pressing the Prev/Next button.
- (3) Select the channel you want to save, and press the Play/Pause button to enter.
- (4) Press and hold the Preset button for 3 seconds.
- (5) Pick one of the available (Empty) slots from the preset store screen(see small screen).
- (6) Press the Play/Pause button to save the channel.
5. Short press the Preset button to recall preset radio list. Press the Prev/ Next button to select DAB station, then press the Play/Pause button to play.

Note: Please press the Preset button to access your preset radio stations in DAB mode, otherwise the stations will display in automatically set order.

FM Radio

1. Press the Mode/Standby button to switch to FM mode.
2. Press and hold the Play/Pause button for 2~3 seconds to start automatic searching for FM radio channels. Available channels will be stored after the search is completed.
Scan Setting: Press and hold the Menu.Info button for 2~3 seconds to enter menu set up(see small screen). Press the Prev/Next button to select "Scan Setting", press the Play/Pause button to confirm and enter. Press the Prev/Next button to select All stations / Strong stations, and press the Play/Pause button to confirm. If select All stations, all available channels will be stored after the search is completed. If select Strong stations, only strong signal radio stations will be stored after the search is completed.
3. Press the Preset button to go to the Radio station list, then press the Prev/Next button to select the desired station and press the Play/Pause button to play. Press the Vol-/Vol+ button to adjust volume.
4. Short press the Prev/Next button to adjust radio frequency by 0.05MHz at a time. Long press the Prev/Next button for 3 seconds to start automatic searching for previous/next radio station.
5. Long press the Preset button to add current radio station to the radio list, press the Prev/Next button to select list number you want to use, then press the Play/Pause button to confirm.

Instruction

Bluetooth music play

1. Press the Mode/Standby button to switch to BT mode.
2. To use your Bluetooth enabled device, make sure the Bluetooth function is enabled, then search for "Roxel Nod" on the list and click on it to connect.
3. Play music or any audio files from your Bluetooth enabled device. Press the Prev/Next button to go to previous/next track, press the Vol+/Vol- button to adjust volume.
4. Press the Play/Pause button to play/pause music.
5. Long press the Play/Pause button to disconnect Bluetooth.

System Set up

Press and hold the Menu.Info button for 2~3 seconds to enter menu set up(see small screen). Press the Prev/Next button to select sub-menu items, press the Play/Pause button to confirm and enter. If there is only one sub-menu, press the Play/Pause button to confirm and enter. During operation, press the Menu.Info button to return.

Time and Date Set up

- A- In DAB radio mode, if DAB signal can be searched, the device will automatically set the local time.
- B- Manual Time Set up : Press and hold the Menu.Info button for 2~3 seconds to enter menu set up(see small screen). Press the Prev/Next button to select <System>, then press the Play/Pause button to confirm and enter System set up. Press the Prev/Next button to select <Time/Date>, Press the Play/Pause button to enter date and time set up interface, press the Prev/Next button to select <Set Time /Date>/<Set Hour System>/<Set Date Format>/<Auto Update>.
1. Set Time /Date: Press the Play/Pause button to enter Time/Date set up: Date - Month - Year - Hour - Minute. (press the Prev/Next button to select the numbers and press the Play/Pause button to confirm.)
 2. Set Hour System: Press the Play/Pause button to enter 24h/12h set up, press the Prev/Next button to select, and press the Play/Pause button to confirm.
 3. Set Date Format: Press the Play/Pause button to enter Date Format setting, press the Prev/Next button to select, and press the Play/Pause button to confirm.

Alarm clock Set up

This device can set 2 sets alarms.

1. Press and hold Alarm 1 button to enter Alarm 1 set up interface (see small screen).
Press and hold Alarm 2 button to enter Alarm 2 set up interface (see small screen)
2. Alarm set up: Alarm time - Alarm source - Repeat. (Press the Prev/Next button to select, press the Play/Pause button to confirm and go to next.)
Alarm sound source: Buzzer / FM / DAB
Repeat: Once / Daily / Weekends / Weekday
3. Press the Menu.Info button to return/exit Alarm set up. Press Alarm 1 button to turn on/off Alarm 1. Press Alarm 2 button to turn on/off Alarm 2.
4. When alarm clock rings, press the PREV, Play/Pause , or NEXT button to activate the snooze function. After 5 min , the alarm will rings again, press the Mode/Standby or Alarm1/Alarm2 button to stop alarm.

Display Brightness Adjustment

Press the Lum button to adjust display brightness Level : 4-3-2-1-off

Sleep Timer

1. Long press the Sleep button to enter sleep timer set up interface (see small screen).
2. Press the Prev/Next button to select Sleep 15 minutes / .../ Sleep 1 Hour 30 minutes/ Sleep OFF. .
3. Press the Play/Pause button to confirm sleep timer setting.
4. The device will goes to standby mode after 15 minutes / 30 minutes/ .../ 2 Hours. (if you select "OFF" and then press the Play/Pause button, sleep timer will be turned off).

@2019 Roxel,
All rights reserved by Roxel Limited
registered in United Kingdom.
The logo "Roxel"
is a trademark of Roxel Limited.

Imported and Distributed by Roxel Ltd.
Unit 11a, Lakes industrial estate, Lower Chapel Hill
Essex CM7 3RU United Kingdom

e-mail: support@roxel.co.uk

Web: www.roxel.co.uk